Operating Instructions for Skydancer/ Skytube

Dirk Joachimsmeier

Tel: 02 91 90 24 691
Fax: 02 91 90 24 799
Mobil: 01 70 33 00 300
dirk.joachimsmeier@airlebniswelt.com

airlebniswelt GbR

Schützenstraße 50 • 59872 Meschede
Tel: 02 91 90 24 691 • Fax: 02 91 90 24 799
info@airlebniswelt.com
www.airlebniswelt.com

Geschäftsführer:
Dominik Stracke • Dirk Joachimsmeier
Steuernr: 334 5701 0624 • FA Meschede

Sparkasse Meschede
Kto: 466 49
BLZ 464 510 12

Please read these instructions carefully before setting up the display.
These instructions are part of the renting contract between the customer and airlebniswelt GbR.

Description of function:
This inflatable is a moving display with a height of 6 to 18m, which is set up with one or two fans. The changing pressure in the inflatable creates the movement of the Skydancer/ Skytube.

Place of installation:
The area of operation needs to be a horizontal place. Remove this area from dirt and light items, which can be absorbed by the fan and destroy the fan. These items can also change the color of the inflatable. To avoid damages and soiling of the inflatable, make sure that in the radius (Hmax) of the Skydancer are no power supply lines, pylons, chimneys, guttering, traffic signs, as well as oily, sharp edged or dirty objects.

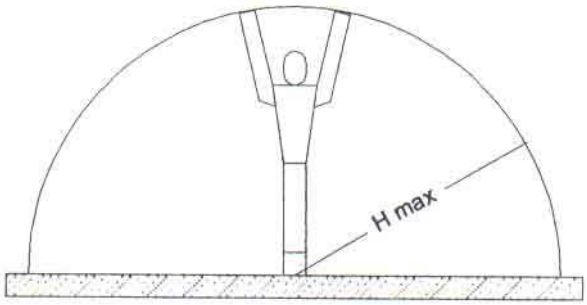

Installation:
Set up the fan on the cleaned up, horizontal ground. Check the grill on both sides of the fan if it is fixed. Do a final visual check before you fasten the Velcro of the Skydancer to the fan.
The top of the Skydancer can be enlarged due to wind strength.

Before using the Skydancer close to the public, the following items should be taken into consideration:

1. Noise of the fan and the moving Skydancer
2. Risk of damage of the Skydancer

If the Skydancer is placed close to people, the Skydancer has to be supervised for minimizing the risk of damage. The renter is responsible for the safety of the people around. The renter is responsible for any permits necessary for the usage of the Skydancer.
At events for more than one day, the renter is responsible for the storage at night.

Conditions of service:
Ideal results are in non-windy weather. The usage of the Skydancer is allowed when it is barely windy and lightly raining. The usage of the inflatable is not allowed if the conditions are rough (wind and rain).